



STEP 1 Lay out the net

- Slide the bottom pole into the post until the spring button clicks into the hole for your net height.


NET HEIGHT

Spring button clicks into the hole




- Lay the net and both sand anchors flat on the sand.
- Hook the lines onto the wall.
- Pull the net straight and tight, away from the wall.

VIEW FROM ABOVE

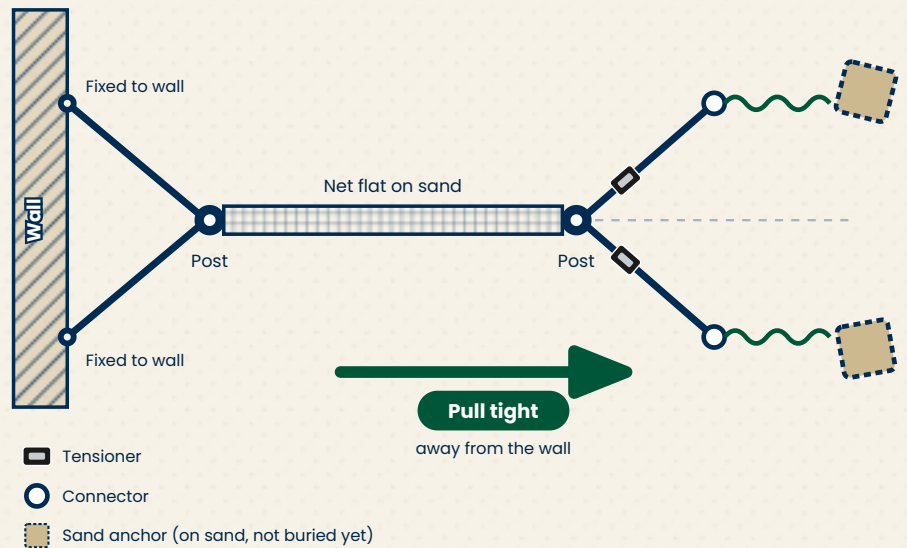

VIEW FROM ABOVE

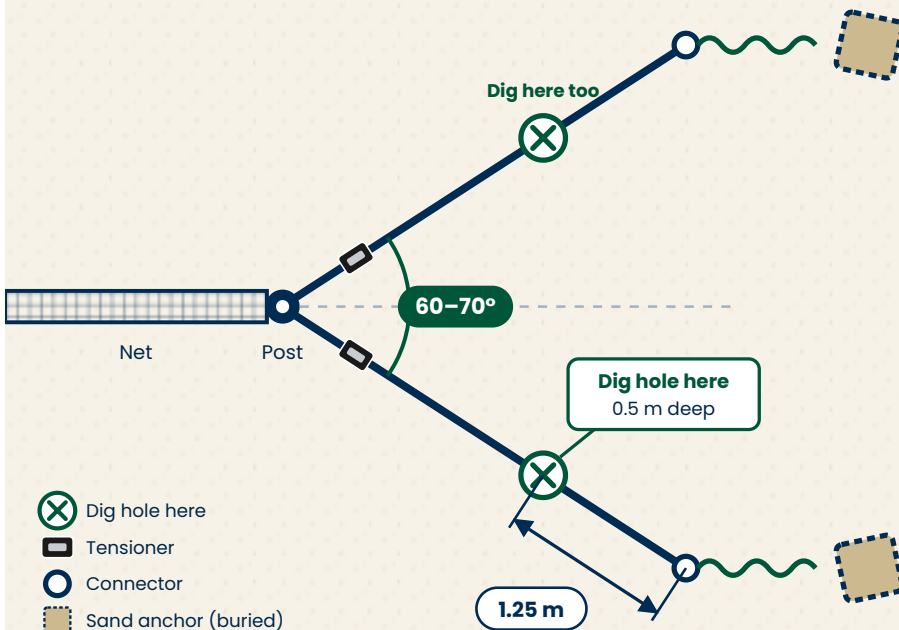

STEP 2 Lines & anchors

- Connect the tensioner lines to the post.
- Hold the release on each tensioner and pull the anchor side of the rope out.
- Lay the two lines out at 60–70° to each other.
- Dig a hole 0.5 m deep, 1.25 m back from the sand-anchor connector along the line.

SIDE VIEW OF HOLE




- Drop the anchor in, cover it and stamp the sand down hard.

Tip: do this at both ends of the net before tightening.

STEP 3 Raise & finish

- 1 Stand up the net, starting on the wall side.
- 2 Tighten both tensioners.
- 3 Lay out the court marker lines.
- 4 Put up the antennas.

Check the tail: look at the rope hanging out of the tensioner. Short tail = good. Long tail = the anchor is too close to the post – dig it up, move it further out and tighten again.

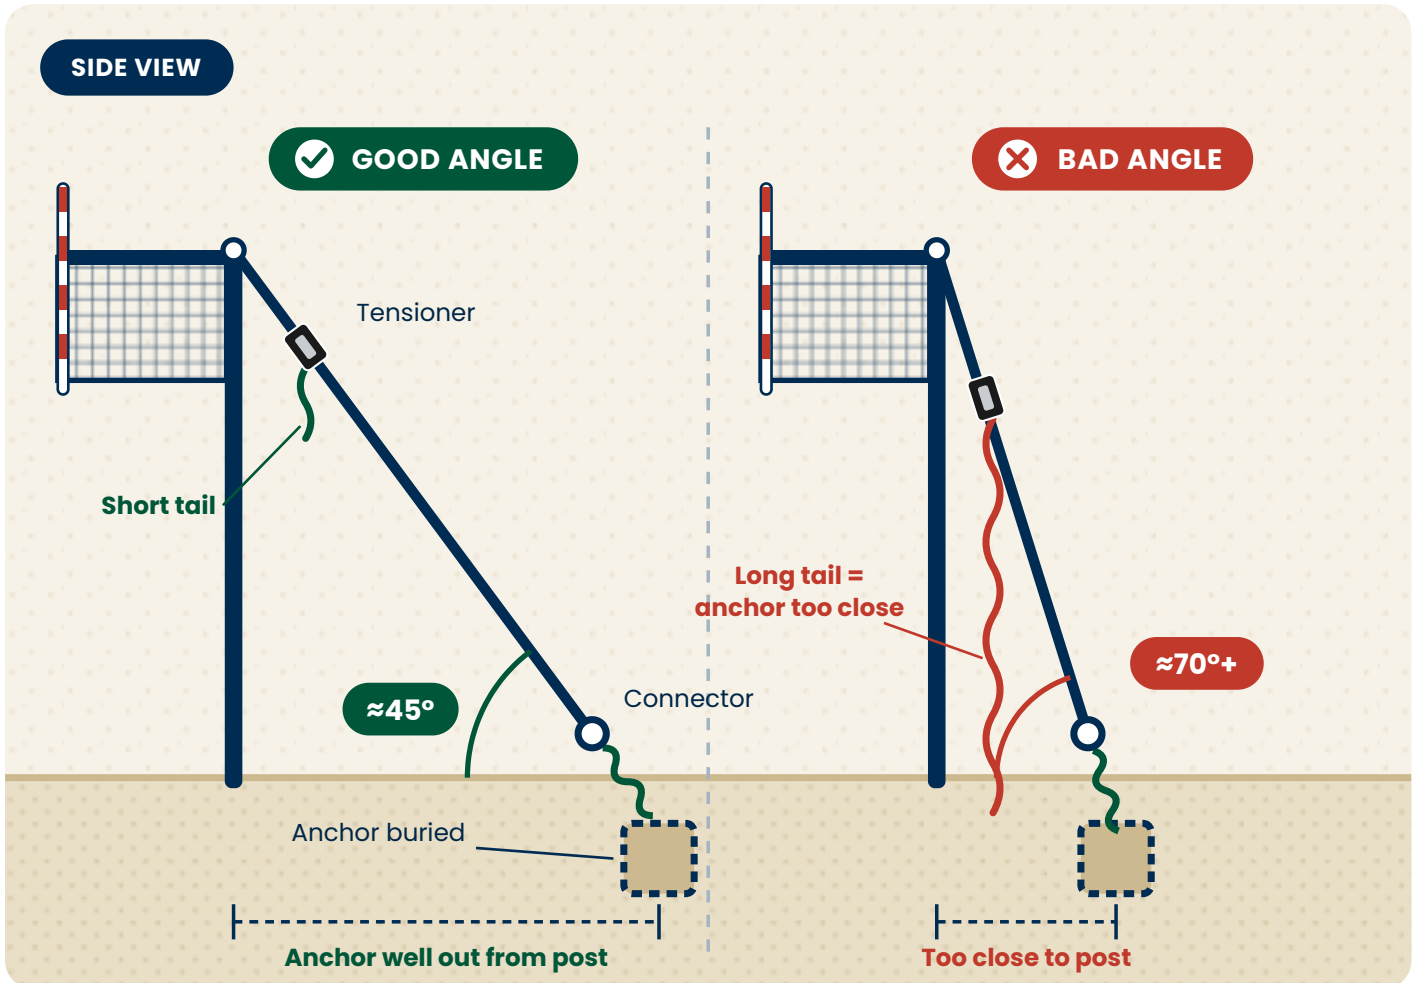
STEP 4 Pack down

- 1 Release the tensioners, then dig out both anchors.
- 2 Wind the lines neatly. Fold the net, don't bundle it.
- 3 Check: poles, anchors, lines, antennas, court lines – all in the bag. Zip it shut.

